



2017+ Maverick X3 (XRS)  
HD High Clearance A arms # S3121-72



**INSTALLATION INSTRUCTIONS**

**Maverick X3 – XRS HD  
High Clearance A arms**



## 2017+ Maverick X3 (XRS) HD High Clearance A arms # S3121-72


### PARTS LIST

ITEM	PART #	DESCRIPTION	QTY
		Driver Side Upper A arm	1
		Driver Side Lower A arm	1
		Passenger Side Upper A arm	1
		Passenger Side Lower A arm	1

- 1.) Start by placing X3 on flat ground and be sure machine is in Park (P).
- 2.) Use a floor jack to lift the front of the machine.
- 3.) Remove wheels & tires and all 4 A-arms.
- 4.) Take steering knuckle and grind off the factory “wear pad/steering stop”  
-See photos for reference.
- 5.) Remove ball joints from factory A-arms as well as factory bushings and pivot tubes.
- 6.) Reinstall pieces into S3 A-arms.
- 7.) Reinstall A-arms and tighten bolts to OEM specs.
- 8.) Install wheels and tires and make sure all bolts and hardware are tight.
- 9.) Drive vehicle for a few minutes and recheck all hardware.



## 2017+ Maverick X3 (XRS) HD High Clearance A arms # S3121-72

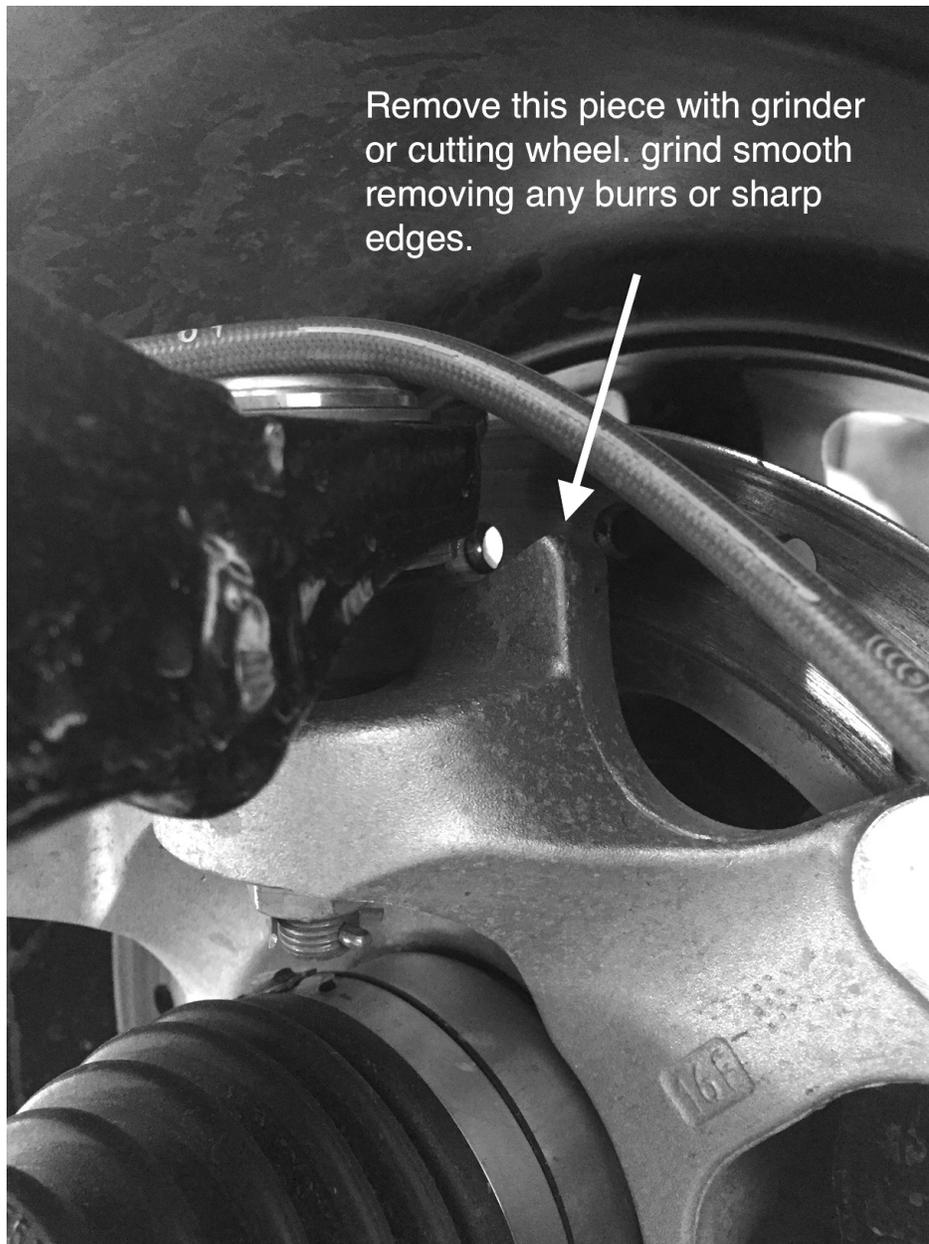

Remove this piece with grinder or cutting wheel. grind smooth removing any burrs or sharp edges.



## 2017+ Maverick X3 (XRS) HD High Clearance A arms # S3121-72



Smooth! no rough spots  
and plenty of clearance for  
the ball joint cut to move  
throughout the suspension  
cycle.