



2017+ Can-Am X3 Tree Kickers # S3127-TK



INSTALLATION INSTRUCTIONS

Can-Am X3 – Tree Kickers



2017+ Can-Am X3 Tree Kickers # S3127-TK

PARTS LIST

ITEM	PART #	DESCRIPTION	QTY
	S3127-TK	Driver Tree Kicker	1
	S3127-TK	Passenger Tree Kicker	1
		Driver Rear Mount Arm	1
		Passenger Rear Mount Arm	1
	29711	Curved Washers	12
		3/8" x 2.75" Bolt	6
		M10 x 60 Bolt	2
		M10 Flat Washer	4
		M10 Nylock Nut	2
		Finishing Plug	4

- 1.) Place X3 in park (P) on a flat level surface.
- 2.) Check provided hardware. See picture A.
- 3.) Remove both seats, using 18mm socket for rear nuts and 13mm end wrench for front bolts.
(*Pro Tip : Slide seat forward to allow impact access to rear nuts.*)
- 4.) Locate small divots in side panel plastics that indicate where preset frame holes are.
- 5.) From the inside, locate factory nerf bar holes in frame – B pillar main tube and floor tube. See pictures B, C, and D.
- 6.) Using a 7/8" step bit, drill through the plastics to allow nerf bar mounting bungs to connect to frame. (*Pro Tip : In some cases, it may be necessary to drill ~1/4" higher than the divot, due to frame variance/plastic sag.*)
- 7.) Secure nerf bar to frame using 3/8" bolts into mounting bungs and curved washers on both sides of frame tube. (*Pro Tip : Apply red threadlocker to first 6 threads of each bolt.*) See pictures E, F, and G.
- 8.) Start bolts by hand – then using 14mm end wrench, snug these bolts but do not tighten yet.



2017+ Can-Am X3 Tree Kickers # S3127-TK


- 9.) Remove rear upper sway bar mount bolt, using an 18mm socket/impact and end wrench. See picture H.
- 10.) Install Rear Mount Arm by utilizing rear upper sway bar mount bolt and sliding into the Lower Mount. Fasten, with red threadlocker, using provided M10 x 60mm bolt, washers, and nut. (*Note : Mount arms are side specific.*) See pictures I and J.
- 11.) Reinstall rear upper sway bar mount bolt and nut, using red threadlocker. Final tighten to OEM specs.
- 12.) Final tighten the 3/8" bolts followed by M10 x 60mm bolt, using red threadlocker.
- 13.) Install Finishing Plugs using a dead blow or rubber mallet.
- 14.) Reinstall front tires to factory spec and remove from jack stands.
- 15.) Reinstall seat and repeat process for opposite side.

Thank you for choosing S3 Power Sports! Let us know if you have any questions! 855-221-7097



2017+ Can-Am X3 Tree Kickers # S3127-TK

Picture A

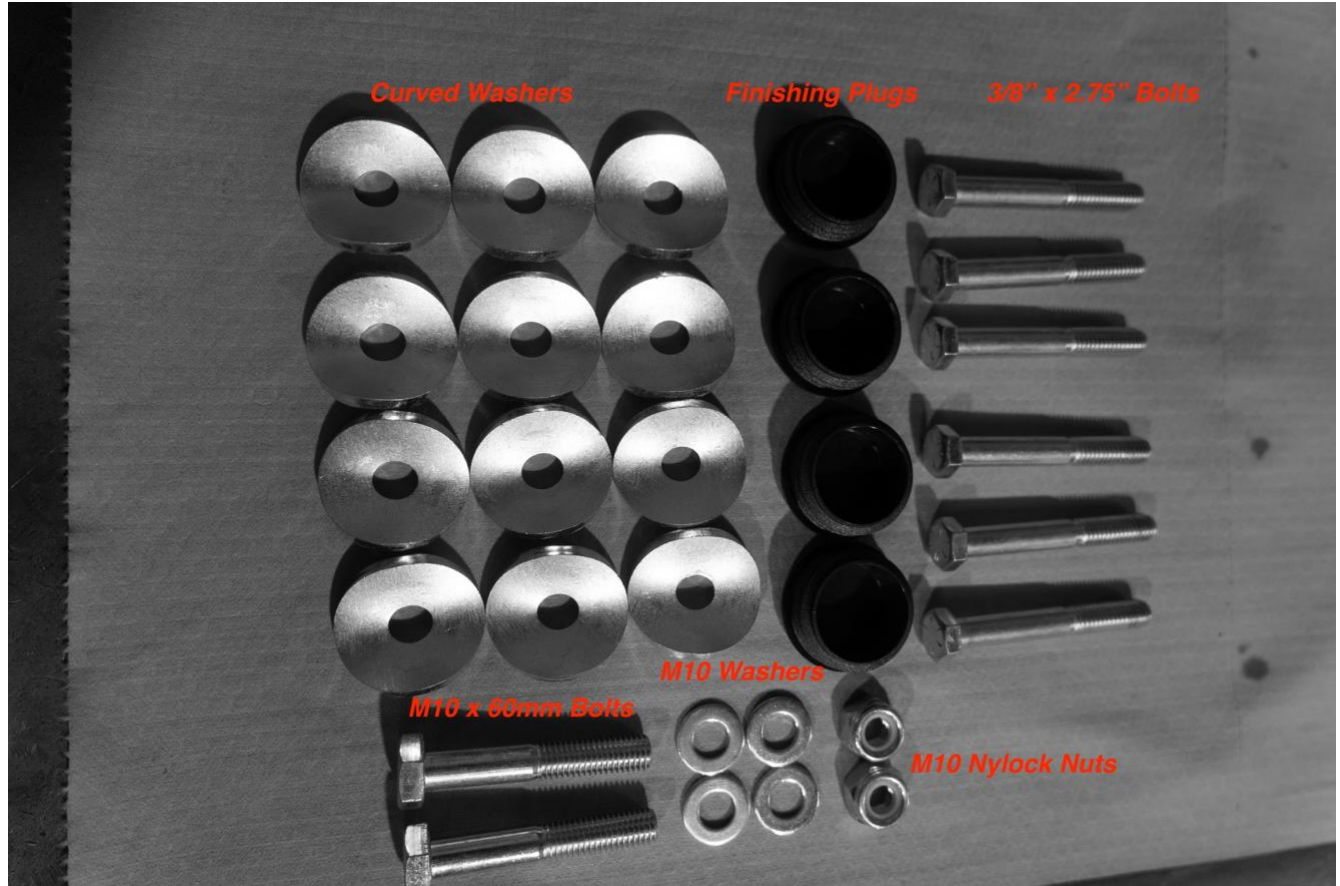




2017+ Can-Am X3

Tree Kickers # S3127-TK

Picture B

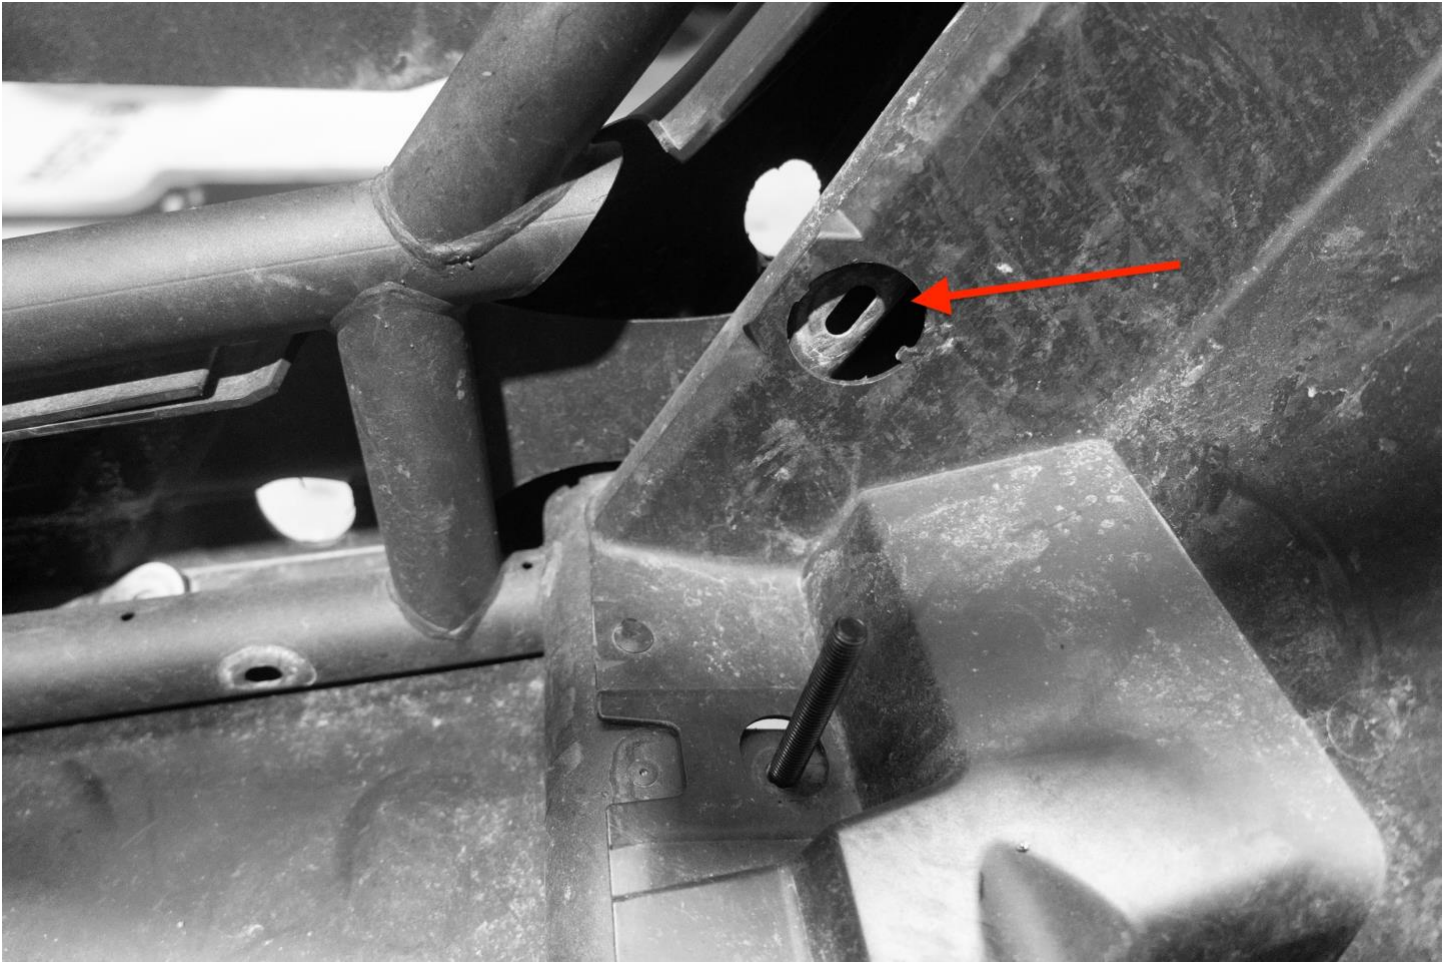



2017+ Can-Am X3

Tree Kickers # S3127-TK

Picture C






2017+ Can-Am X3

Tree Kickers # S3127-TK


Picture D

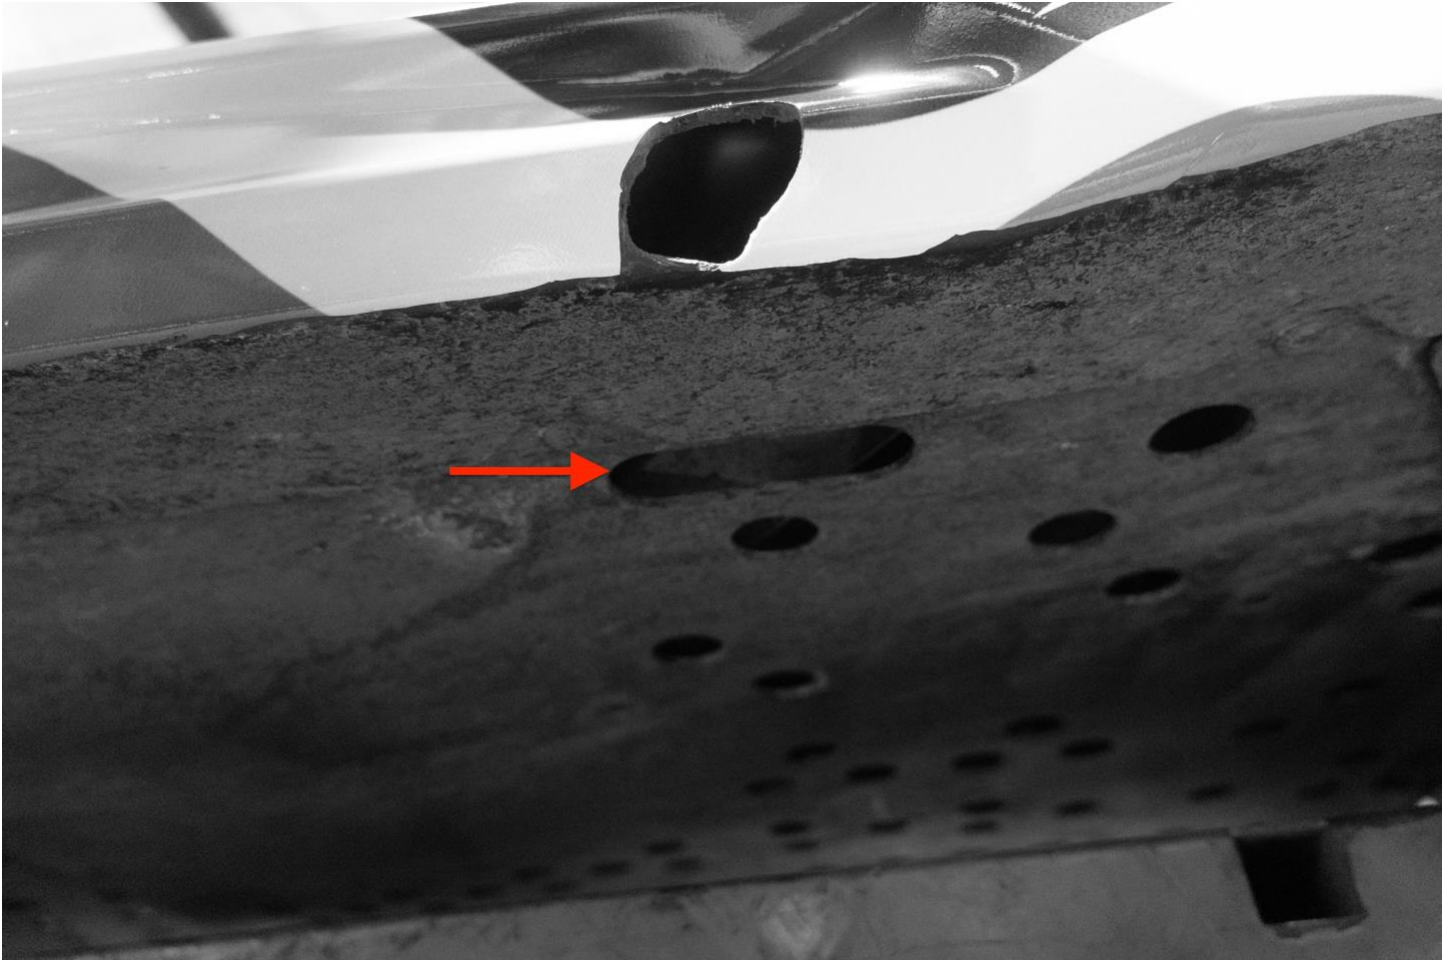



2017+ Can-Am X3 Tree Kickers # S3127-TK

Picture E

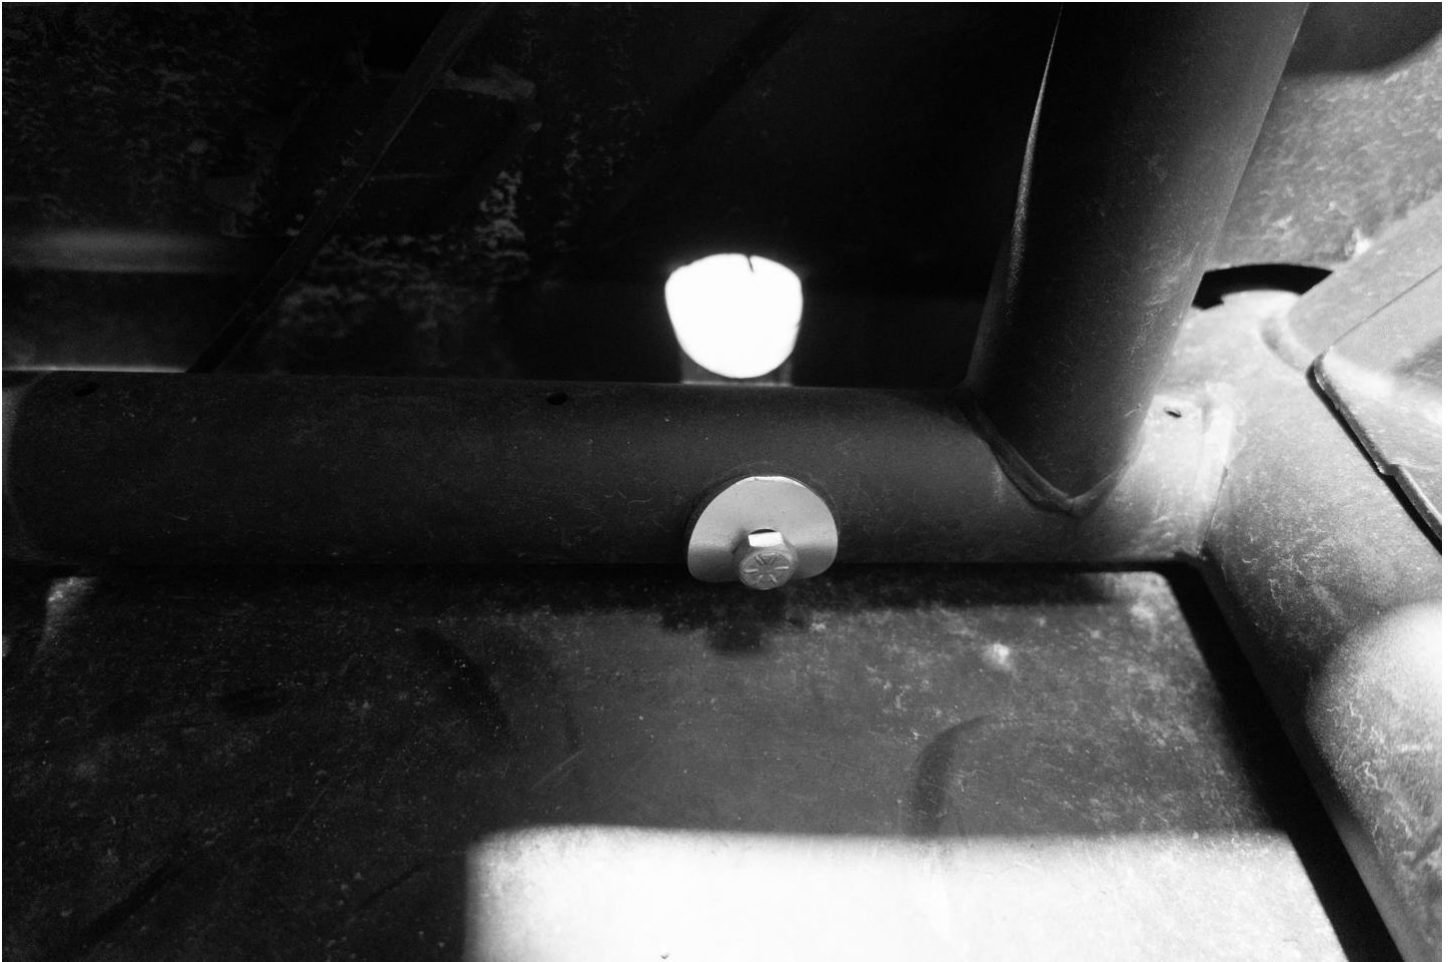



2017+ Can-Am X3 Tree Kickers # S3127-TK

Picture F





2017+ Can-Am X3

Tree Kickers # S3127-TK


Picture G





2017+ Can-Am X3 Tree Kickers # S3127-TK

Picture H

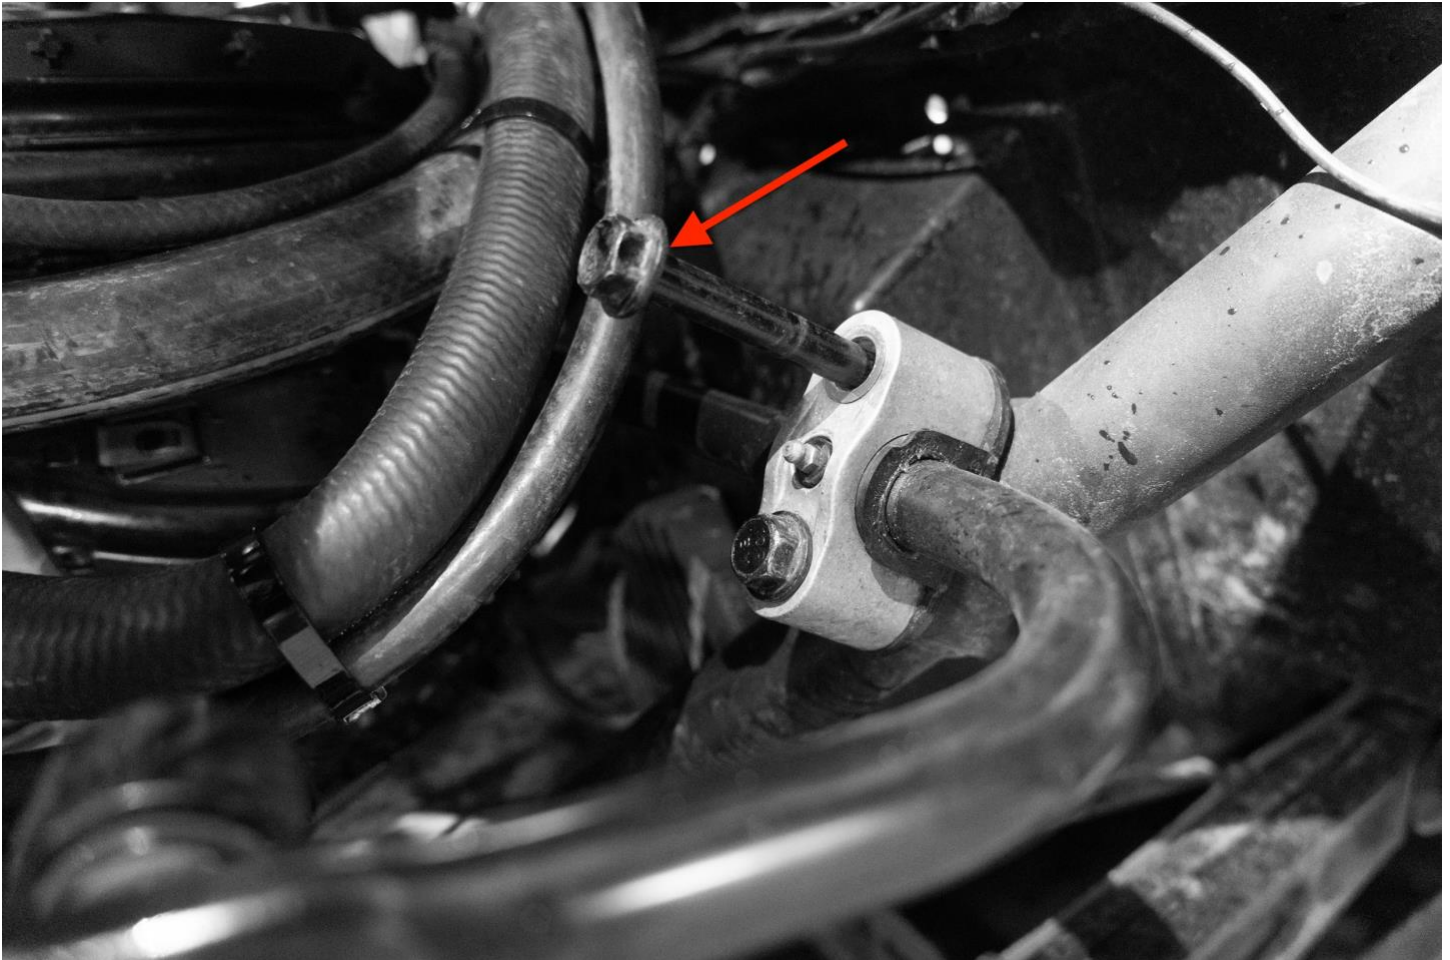



2017+ Can-Am X3 Tree Kickers # S3127-TK

Picture 1





2017+ Can-Am X3 Tree Kickers # S3127-TK

Picture J

